

F One

Operating Manual

GENELEC®



F One Active Subwoofer



General description

The Genelec F One is a very compact active subwoofer designed to complement Genelec G One or G Two active loudspeakers. The F One extends the system's bass response down to 35 Hz and integrates perfectly with the main loudspeakers in any environment. The playback level for the whole system is conveniently controlled by the wireless volume control provided with the subwoofer. A wired volume control is available as an option.

The F One has integrated bass management for the two output channels which directs frequencies below 85 Hz to the subwoofer and higher frequencies through the output connectors to the main loudspeakers. When using the subwoofer for the .1/LFE channel of a multichannel system, we recommend that bass management is done in the processor or receiver and only the LFE channel is connected to the subwoofer.

Installation

Before connecting the audio signals, ensure that all equipment is switched off.

As the F One contains its own amplifier, no separate power amplifier is needed. Never connect the F One to the loudspeaker outputs of a power amplifier, integrated amplifier or receiver.

Please follow the steps listed below for a successful setting up of the subwoofer:

1. Check the contents of the shipment. In addition to the subwoofer, there is a wireless remote control, a mains cable, an IR extension cable and a Quick Setup

Guide.

2. Pull out the battery insulating strip from the underside of the remote control as shown in figure 1. This strip insulates the battery from the contacts on the remote control during shipping and the remote control does not function before it is removed.

3. Place the subwoofer in its position.

4. Connect audio cables from your signal source(s). You can connect up to two digital audio sources and two analog audio sources.

5. Connect the main loudspeakers to the output connectors of the subwoofer.

6. Adjust the phase of the subwoofer as instructed in this manual and the Quick Setup Guide.

7. Use test recordings and familiar music pieces to judge the sound balance. Use the "SUBWOOFER LEVEL" rotary control and the "BASS ROLL-OFF" dip switches to fine-tune the balance. If this fails, consider relocating the subwoofer.

Operating Environment

The F One subwoofer is designed for indoor use only. The ambient temperature should be 15-35 °C (50-95 °F) and the relative humidity 20-80 %. Condensation is not allowed. If it has been stored or transported in a cool environment, the product must be allowed to warm up in its packing to the ambient temperature before connecting mains power.

Connectors

The F One is equipped with both analog and digital signal input connectors, that can be used simultaneously to connect

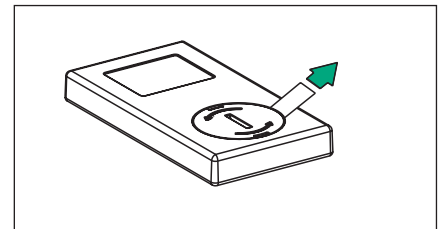


Figure 1. Removing the battery insulating strip from the remote control

up to four audio sources (two analog, two digital). Switching between sources is done with the Select button on the connector panel or with the "<" and ">" buttons on the remote control. The colour of the LED light on the subwoofer enclosure indicates which source is selected.

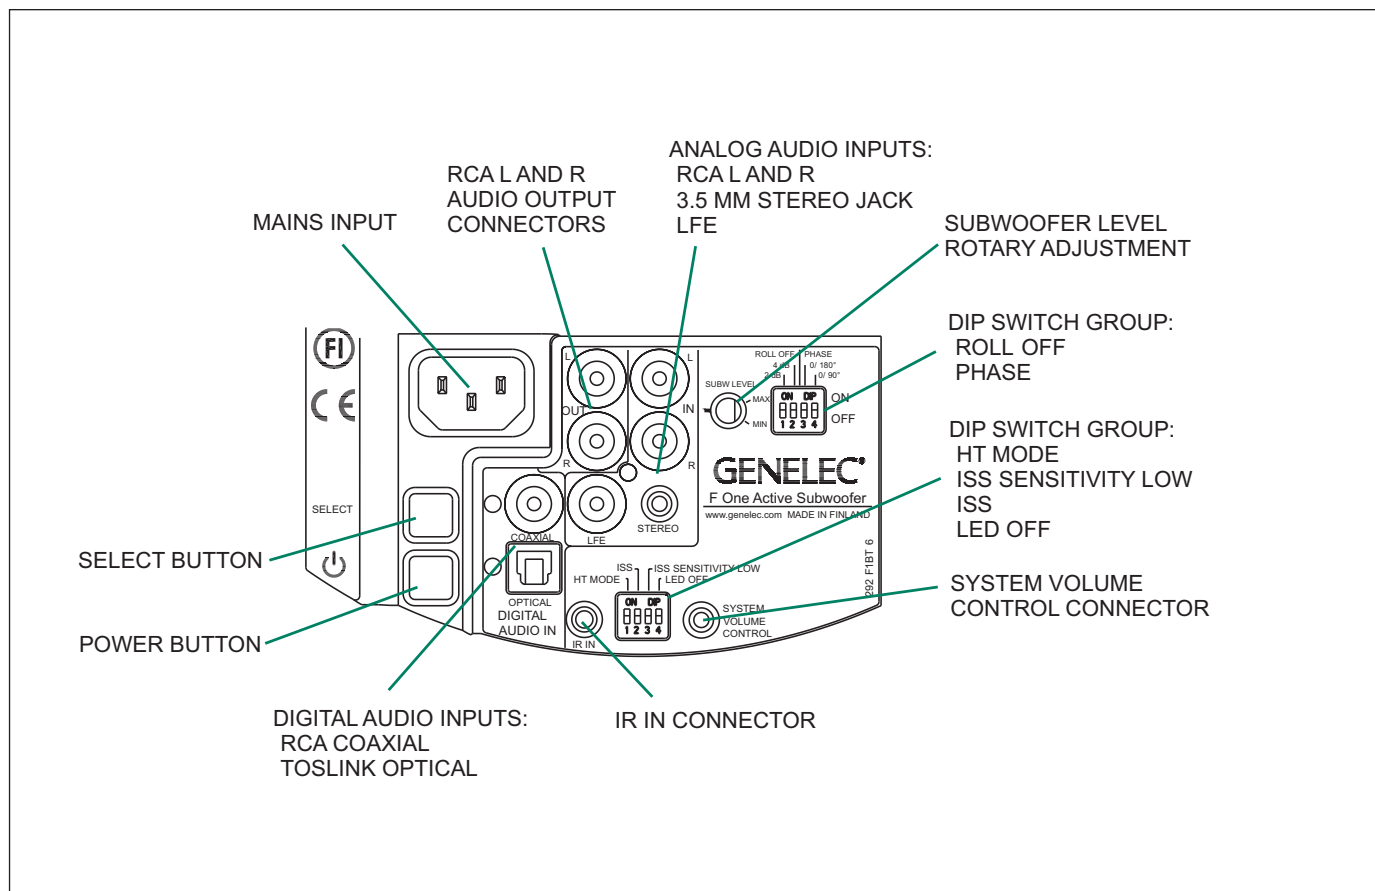


Figure 2. Connectors and controls of the F One.

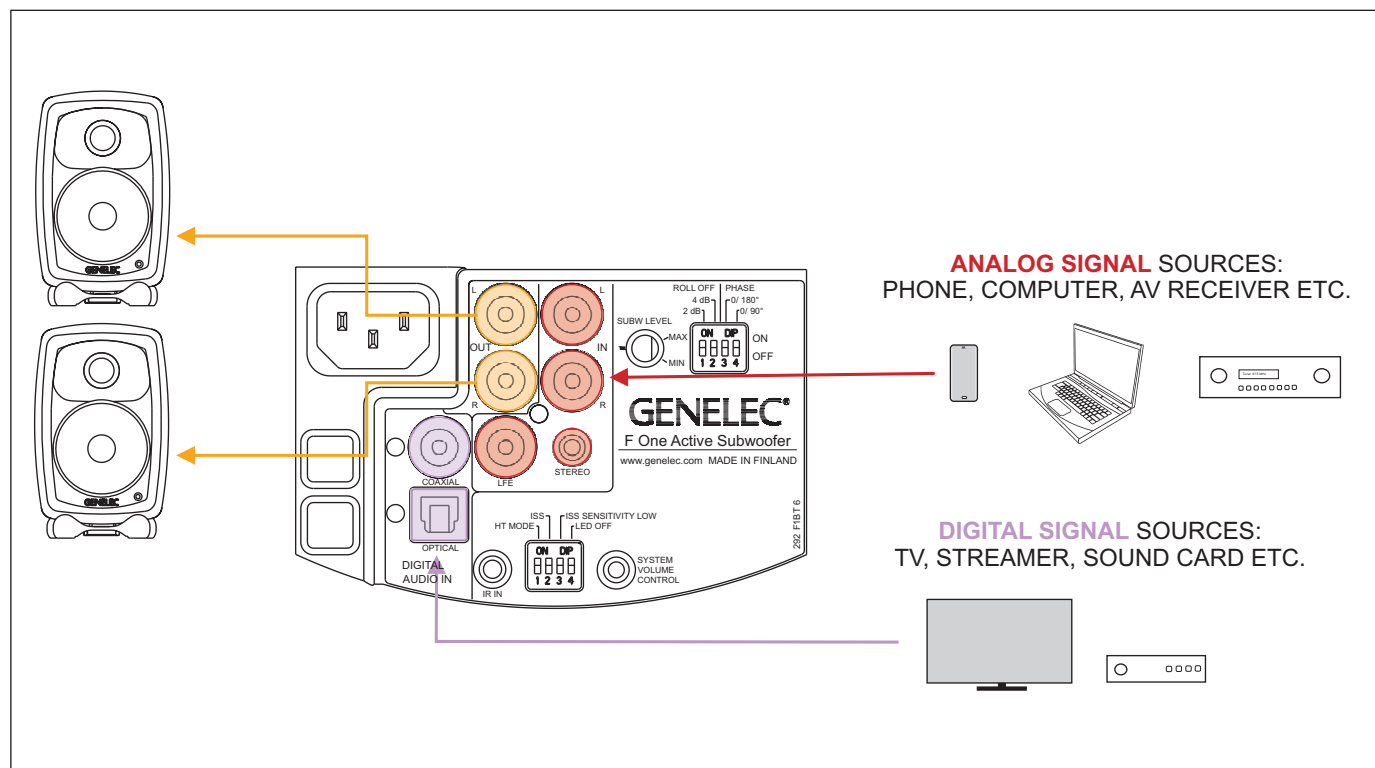


Figure 3. Audio cabling

Subwoofer placement	Bass Roll-Off
Near a wall	-2 dB
In a corner	-4 dB

Table 1. Suggested Bass Roll-Off settings in typical situations

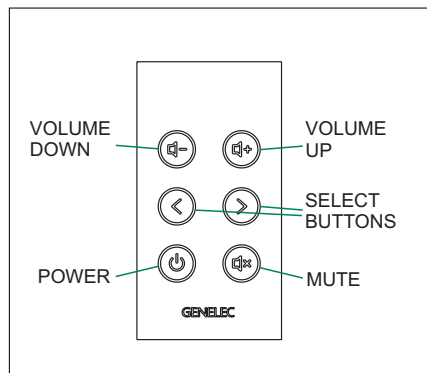


Figure 4. F One remote control

Analog Output Connectors

The F One has RCA analog stereo L/R output connectors. Connect signal cables from these connectors to the main speakers. These outputs are high pass filtered at 85 Hz (See chapter Bass Management). Information.

System Volume Control Connector

This connector allows connecting the Genelec 9310A Wired Volume Control which is available as an accessory. When connected, the 9310A controls the volume of the whole system, including the main speakers.

IR IN Connector

If the F One is used with an infrared type remote control (see chapter Use with IR Remote Controls) and the desired location of the subwoofer does not allow an unobstructed line of sight to the receiver located next to the LED in one of subwoofer's feet, the IR extension cable provided with the subwoofer can be connected here. The receiver end of the cable is then brought to a location where the IR remote control reception works conveniently, for instance close to the IR receiver of a television set when using the subwoofer and speakers with a TV.

Functions And Controls

HT Mode

Turn this switch to "ON" when you connect a sound source with its own volume control to the analog inputs of the F One. In this mode the volume control of the F One does not have effect on the analog signals. However, it works with the digital inputs, so you can use them to connect other signal sources.

ISS Sensitivity Low

If the Intelligent Signal Sensing (ISS) function switches the subwoofer on when there is no audio signal present, turning this switch to "ON" reduces the triggering sensitivity of the function.

ISS

The Intelligent Signal Sensing (ISS) function monitors the audio signal fed to the subwoofer. If there is no signal for approximately 45 minutes, the function switches the subwoofer to Standby mode, reducing the power consumption to less than 0.5 Watts. When the signal resumes, the subwoofer powers up again. There is a slight delay in the automatic powering up. In those environments where the subwoofer is required to be on all of the time, the ISS function can be disabled by setting the "ISS" switch to the "OFF" position. Then the subwoofer is continuously powered and can be turned off using the power button on the remote control or connector panel.

LED Off

This switch deactivates the status indicator LED on the "foot" of the subwoofer.

Roll-Off

These two switches attenuate the subwoofer's bass response below 35 Hz. Attenuation levels are -2, -4 and -6 dB (both switches "ON").

Phase

These two switches provide phase adjustment for the subwoofer in -90 degree increments. See chapter "

along the wall so that different room modes are excited at different levels. Positioning the subwoofer close to a corner will boost the bass level at lower frequencies and may cause asymmetrical spatial imaging.

ISS™ Autostart

The automatic power saving function ISS (Intelligent Signal Sensing) can be activated by setting the “ISS” switch on the connector panel to “ON.” Automatic powering down to standby mode happens after a certain time when playback has ended. The power consumption in standby mode is typically less than 0.5 watts. Playback will automatically resume once an input signal is detected from any source.

Alternatively, the subwoofer can be activated by pushing any button on the remote control.

There is a slight delay in the automatic powering up. If this is undesirable, the ISS™ function can be disabled by setting the “ISS” switch on the connector panel to “OFF.” In this mode, the subwoofer is powered on and off using the remote control or the power button on the connector panel.

The “ISS SENSITIVITY LOW” switch lowers the triggering sensitivity of the ISS function. This can be necessary if the subwoofer “wakes up” even if there is no audio signal.

Setting The Playback Level

The rotary “SUBWOOFER LEVEL” level adjustment can be used for matching the subwoofer’s playback level with the main loudspeakers.

Setting The Bass Roll-Off Switches

The acoustic response of the subwoofer may have to be matched to the characteristics of the room and the positioning in which it will be used (see Table 1). To adjust the subwoofer to match these characteristics use the “BASS ROLL-OFF” control switches located on the connector panel. When all Roll-Off switches are ‘OFF’, a flat anechoic response is obtained.

Setting The Phase Control

The effect of incorrect phase alignment between the main loudspeakers and the subwoofer is a drop in the frequency response of the whole system at the main loudspeaker / subwoofer crossover frequency. The phase difference between the


main loudspeakers and subwoofer at the listening position is dependent upon the distance from the listener to the subwoofer in relation to the main loudspeakers. To avoid phase differences between the left and right main loudspeakers and the subwoofer, the subwoofer should be placed close to the center of the front loudspeaker array.

Two phase matching switches allow compensation for incorrect phase alignment. Four settings are provided between 0° and -270°.


Coarse Phase Correction Method

Connect an audio frequency signal generator to a signal input on the subwoofer which has a main loudspeaker connected to the corresponding “OUT” connector. If the loudspeakers are placed at different distances from the listening position, choose the loudspeaker that is nearer.

Set the generator to 85 Hz. If a signal generator is not available, it is possible to use an audio test recording which has a test frequency in the range 70 Hz to 100 Hz. Suitable test signals can be downloaded at www.genelec.com and found in some smart phones.

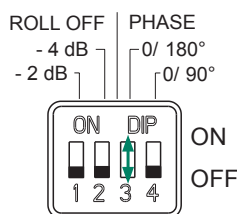

Toggle the -180° phase switch ‘ON’ and ‘OFF’ and set it to the position which gives the lowest sound level at the listening position.

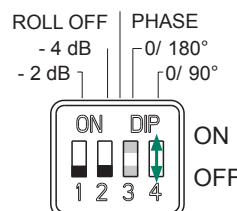

Next toggle the -90

eral F One subwoofers in the same premises, and the user wishes to avoid the situation that more than one subwoofer reacts to the commands given by each remote control, the remote controls can be matched to operate only one subwoofer.

1. Press and hold down the "Power" and "Select" buttons on the subwoofer until the LED starts blinking white.

2. While the LED is blinking, first press and hold down the volume "+" button on the remote control and then the volume "-" button. Keep both buttons pressed for a few seconds until the status indicator LED on the subwoofer stops blinking. This indicates that matching is completed and the matching operation ends automatically.

Now the subwoofer should only respond to commands given by the matched remote control, and respectively, the matched remote control should not work with other F Two units. For cancelling the matching operation while the LED is blinking, press and hold down the "Power" button on the subwoofer for two seconds. If you wish to undo a matching completely, press and hold down the "Power" button on the subwoofer for ten seconds.

NOTE: In some cases the local WiFi network can cause problems with the RF remote control, if they operate on the same wavelength. We recommend the use of an IR remote control in these cases.

Safety Considerations

The Genelec F One complies with international safety standards. However, to ensure safe operation and maintain the equipment in safe operating condition the following warnings and cautions must be observed.

- Do not use this product with an unearthed mains cable or a mains connection without the protective earth contact as this may lead to personal injury.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Servicing and adjustment must only be performed by qualified service personnel.
- Opening the subwoofer is strictly prohibited except by qualified service personnel.

- Do not expose the subwoofer to water or moisture. Do not place any objects filled with liquid, such as vases on the subwoofer or near it.

Note that the amplifier is not completely disconnected from the AC mains service unless the mains cable is removed from the amplifier or the mains outlet.

Warning!

This equipment is capable of delivering sound pressure levels in excess of 85 dB, which may cause permanent hearing damage.

Compliance To FCC Rules

Remote control

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This product emits radio frequency energy, but the radiated output power of this device is below FCC radio frequency exposure limits. This equipment complies with FCC RF radiation exposure limits for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Subwoofer

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential instal-

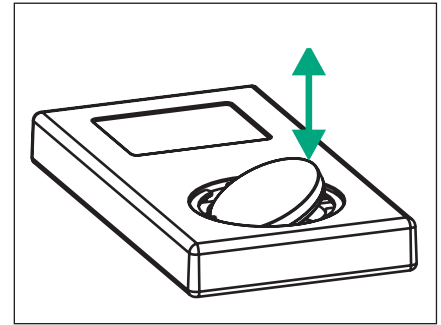


Figure 5. Changing the remote control battery

Maintenance

There are no user serviceable parts inside the subwoofer. Any maintenance of the unit must only be performed by qualified service personnel.

Guarantee

This product is supplied with two year guarantee against manufacturing faults or defects that might alter the performance of the unit. By registering your product at:

www.community.genelec.com

You can get an additional three year guarantee that covers the spare parts.

SYSTEM SPECIFICATIONS

	F One
Free field frequency response (-6 dB)	Main 35 Hz...85 Hz LFE 35 Hz...120 Hz
Maximum short term sine wave SPL output averaged from 30 to 85 Hz, measured in half space at 1 meter	100 dB
Self generated noise level in half space at 1 m on axis (A-weighted)	≤ 5 dB SPL
Driver, magnetically shielded	165 mm (6 1/2 in)
Weight	5.6 kg (12.3 lb)
Dimensions	
Height	256 mm (9 ⁷ / ₈ ")
Diameter	305 mm (12")

AMPLIFIER SECTION

	F One
Amplifier short term output power (Long term output power is limited by driver unit protection circuitry)	40 W
Amplifier system THD at nominal output	≤ 0.05 %
Mains voltage	100 - 240 VAC 50/60 Hz
Power consumption (average)	
Stand by	0.5 W
Idle	5 W
Full output	60 W

CONNECTORS

	F One
Analog audio inputs 10 kOhm	
RCA	L, R, LFE
3.5 mm stereo jack	1
Digital audio inputs	
Optical Toslink	1
Coaxial RCA 75 Ohm	1
Audio outputs	
RCA	L, R

CROSSOVER SECTION

	F One
Subsonic filter (18 dB/octave) below	35 Hz
Crossover frequency (subwoofer/main channels)	85 Hz
LFE channel cutoff frequency	120 Hz
Midband rejection >400 Hz	≥50 dB
Analog input level for 90 dB SPL output at 1 m	-8 dBu at level control max
Digital input level for 90 dB SPL output at 1 m	-19dBFS at level control max
Digital input word length	16...24 bits
Digital input sample rate	32...96 kHz
Sensitivity adjustment range	18 dB
Bass Roll-Off control operating range in 2 dB steps	From 0 to -6 dB @ 35 Hz
Phase matching control in 90° steps	From 0 to -270° @ 85 Hz