

1. Open




2. Insert micro SIM



Note: usage of SIM card adapters could damage the SIM card card reader.

3. Charge

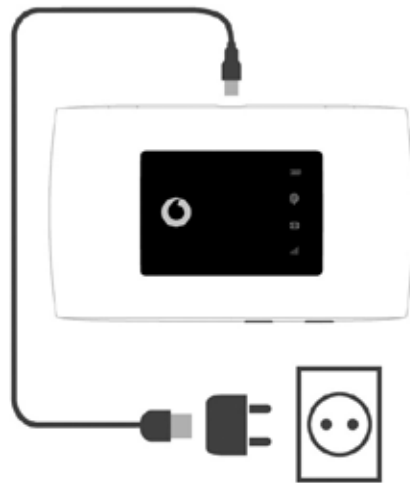

4. Start



Push and hold
power key

5. Connect

Choose Wi-Fi on your computer, smartphone or tablet settings, then select your Mobile Wi-Fi network name.

Enter the password to connect and open the web app.

When you first connect to the network you may be asked to activate your SIM.

If you're asked to unlock your SIM card, go to **<http://VodafoneMobile.wifi>** and enter the PIN for your SIM.



Turn over for more information about using your Vodafone Mobile Wi-Fi.

Download the app

The ZTElink app is a quick and easy way to monitor your network on a smartphone or tablet.

Download the app from your device's app store, or scan the appropriate QR code here to take you to the app store.



iOS
(iPhone or iPad)



Android
(smartphone or tablet)

Using the web interface at VodafoneMobile.wifi

You can log in the web interface using the password **admin**.

Then you can see your network and Wi-Fi status, how much data you have used,

manage roaming settings, get help and support, and even send and receive SMS messages from your computer.



LED overview



Battery

- Red blinking - Low
- Green blinking - Charging
- Green steady - Good



Wi-Fi Signal

- No light - Wi-Fi off
- Blue blinking - WPS active
- Blue steady - Wi-Fi (WLAN) active



SMS Text Messages

- No light - No unread SMS
- Blue slow blinking - SMS inbox full
- Blue fast blinking - Device update available at VodafoneMobile.wifi
- Blue steady - Unread SMS



Mobile Broadband

- Blue steady - Connected to 4G
- Green steady - Connected to 2G/3G
- Orange steady - Low Signal
- Red steady - No SIM detected, or PIN code required

Vodafone 4G Mobile Hotspot

Model R219z

Quick Start Guide

